




Samsung Galaxy S8 Screen Replacement

Learn how to replace the screen on the Samsung Galaxy S8.

Written By: Adam O'Camb

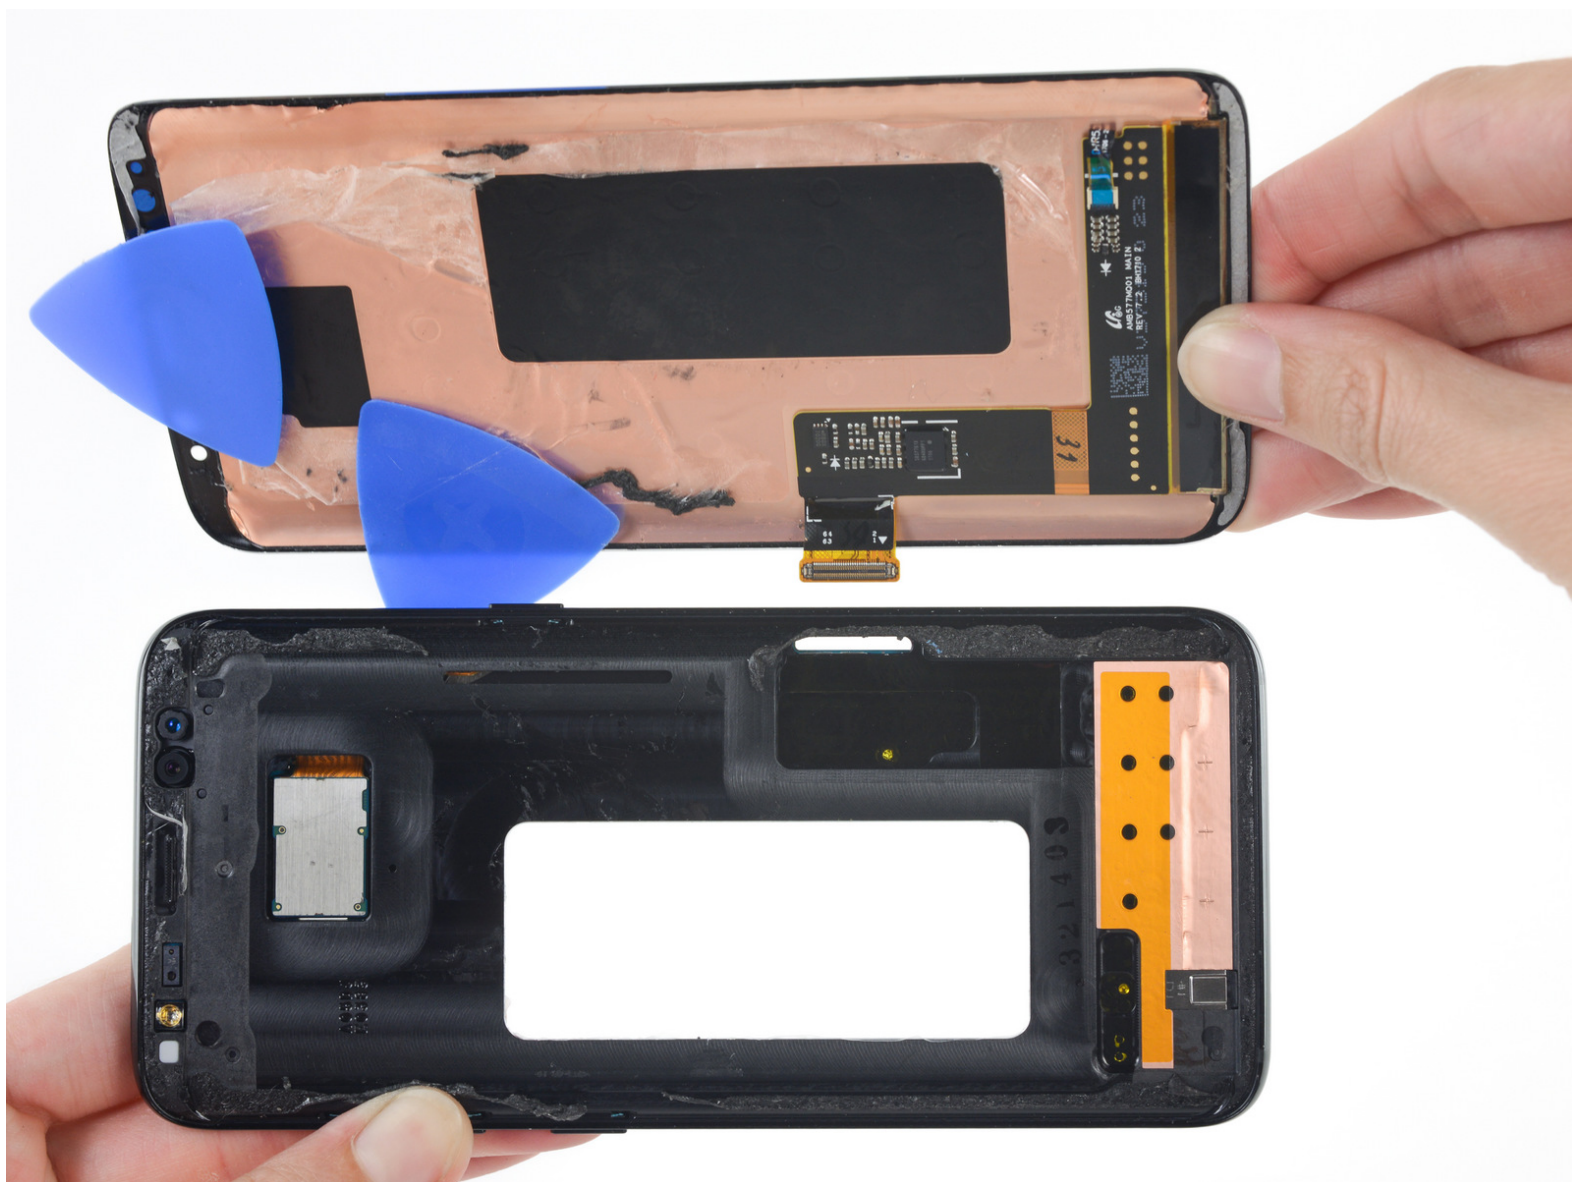

INTRODUCTION

Use this guide to replace a cracked or broken screen on your Samsung Galaxy S8.

This guide involves removing the rear glass cover, you will need replacement adhesive to reattach the back cover to the phone. If your replacement screen does not come with adhesive, you will need to use tape to secure it as well.



TOOLS:

- [iOpener](#) (1)
- [Halberd Spudger](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Plastic Cards](#) (1)
- [Tweezers](#) (1)



PARTS:

- [Galaxy S8 LCD Screen and Digitizer](#) (1)
- [Galaxy S8 LCD Screen and Digitizer Assembly](#) (1)
- [Galaxy S8 Display to Midframe Adhesive Strips](#) (1)
- [Galaxy S8 Display Heat Dissipation Sticker](#) (1)
- [Galaxy S8 Midframe](#) (1)
- [Galaxy S8 Rear Cover Adhesive](#) (1)
- [Tesa 61395 Tape](#) (1)

Thin, high-bond tape is required if the replacement part does not come with adhesive.

Step 1 — iOpener Heating



- ⓘ We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
 - ⚠ For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

Step 2




- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.

Step 3





- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.


 The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

Step 4 — Rear Glass Assembly



- Apply a heated iOpener to a long edge of the S8 for about 2 minutes.
 -  You may need to reheat and reapply the iOpener several times to get the phone warm enough. Follow the iOpener instructions to avoid overheating.
 -  As you're waiting for the adhesive to soften, move on and read the following step to get an idea of where to pry.

Step 5

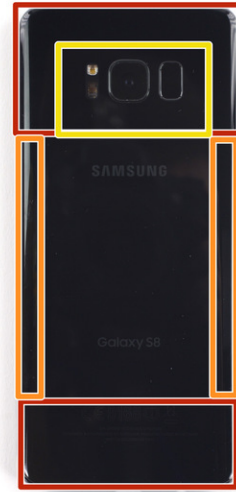

- In the following steps you will be cutting through the adhesive around the edge of the rear glass panel.
- The adhesive on the rear case is laid out as seen in the first image.
- The prying pattern as seen from the outside of the phone is as follows:
 - Thick portions of adhesive
 - Thin areas of adhesive
 - Avoid prying here, to protect the fingerprint sensor.

Step 6



- Once the back panel is warm to the touch, apply a suction cup as close to the heated edge of the phone as you can while avoiding the curved edge.
 - ⓘ The suction cup will not make a good seal on the curved portion of the glass.
- Lift on the suction cup, and insert a halberd spudger, or opening pick, under the rear glass.
 - ⓘ Due to the curved glass, you will be pushing up, rather than inserting parallel to the plane of the phone.

Step 7



- Once you have the tool firmly inserted into the glass, [reheat](#) and reapply the iOpener to soften the adhesive.

Step 8



- Slide the blade of a Halberd spudger down the side of the phone, separating the adhesive.
- ⓘ Go slowly so that the tip doesn't slip out of the seam. If cutting becomes difficult, reheat and reapply the iOpener.



Step 9




- Repeat the previous heating and cutting procedure for the remaining three sides of the phone.
- Leave an opening pick on each side as you continue to the next to prevent the adhesive from resealing.

Step 10



-  The fingerprint sensor cable connects the phone to the rear glass near the main camera. The cable is very short and should disconnect as the rear glass is removed.
-  As you lift the glass, peek in to be sure the orange cable with a blue connector has disconnected.

 - Use the opening picks to slice through any remaining adhesive and open the phone slightly.
-  If the fingerprint sensor cable seems snagged or stays taut do not open the phone any further. Disconnect the connector with the point of a spudger before proceeding.

 - Remove the glass from the phone.

Step 11



- ✦ Before replacing your rear glass you will need to remove the old adhesive from the phone body.
- After removing the old adhesive, clean the edges of the phone body with high concentration isopropyl alcohol (at least 90%), then apply the new adhesive.

Step 12 — NFC Antenna and Charging Coil Assembly



- Remove eleven 3.7 mm Phillips #000 screws.

Step 13



- Remove the NFC antenna and charging coil assembly.

Step 14 — Battery Connector



- Use the flat end of a spudger to disconnect the battery connector.
- i** Although the battery is not shown in the next steps, there is no need to remove it for this guide. Just disconnect the battery and you're good to go.

Step 15 — Display Assembly



- Use the flat end of a spudger to disconnect the display and digitizer connector.

Step 16



- [Heat an iOpener](#) and apply it to one of the long edges of the S8 for about 2 minutes.
- ⓘ You may need to reheat and reapply the iOpener several times to get the phone warm enough. Follow the iOpener instructions to avoid overheating.

Step 17




- Once the screen is warm to the touch, apply a suction cup as close to the heated edge of the phone as you can while avoiding the curved edge.
- ⓘ The suction cup will not make a good seal on the curved portion of the glass.
- Lift on the suction cup, and insert a halberd spudger, or opening pick, under the display assembly.
- ⓘ Due to the curved glass, you will be pushing up, rather than inserting parallel to the plane of the phone.

Step 18



- Once you have the tool firmly inserted into the glass, [reheat](#) and reapply the iOpener to soften the adhesive.

Step 19

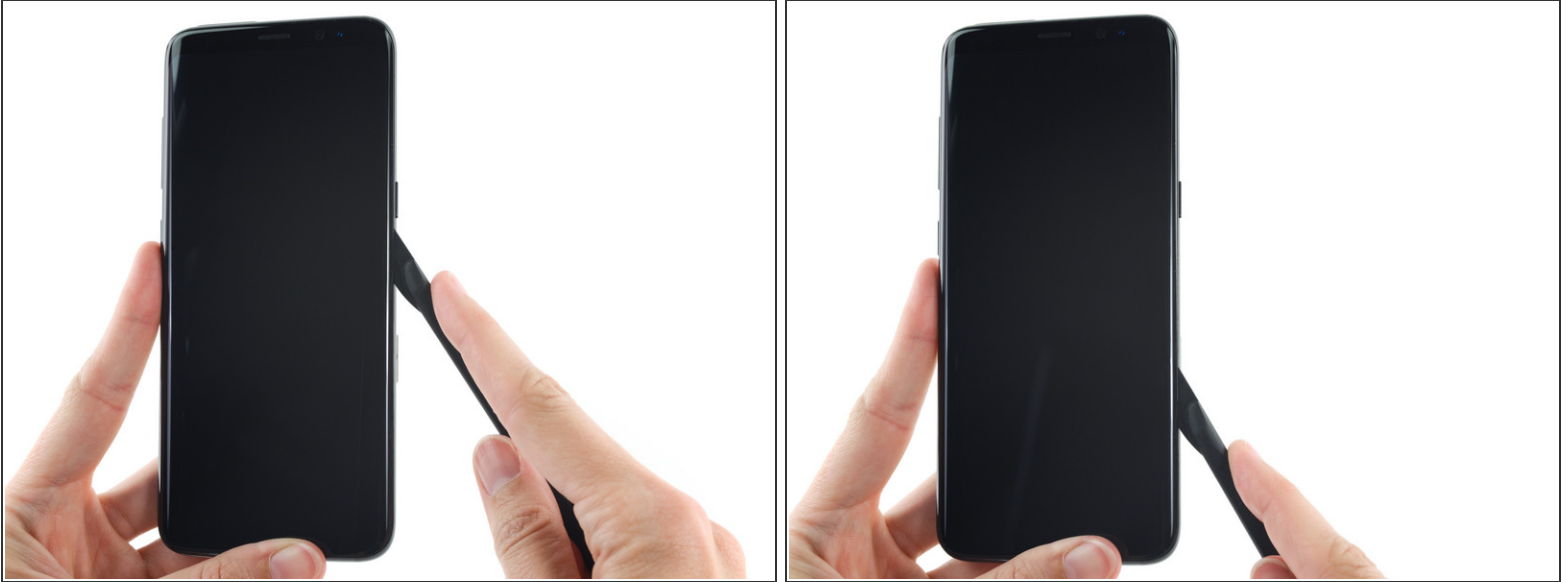

- Slide the blade of a Halberd spudger down the side of the phone, separating the adhesive.
- ❗ Go slowly so that the tip doesn't slip out of the seam. If cutting becomes difficult, reheat and reapply the iOpener.

Step 20




- Repeat the previous heating and cutting procedure for the remaining three sides of the phone.
- Leave an opening pick on each side as you continue to the next to prevent the adhesive from resealing.
- ❗ When inserting the opening picks into the side of the phone, insert a long edge of the opening pick, instead of a point, to avoid putting extra stress on the screen.

Step 21




- Use an opening card to pry the screen away from the midframe.
- ❗ Check the back of the phone and note which side of the phone has the display and digitizer connector. Pry on the opposite side of the phone from the connector—the connector will act as a hinge.

Step 22

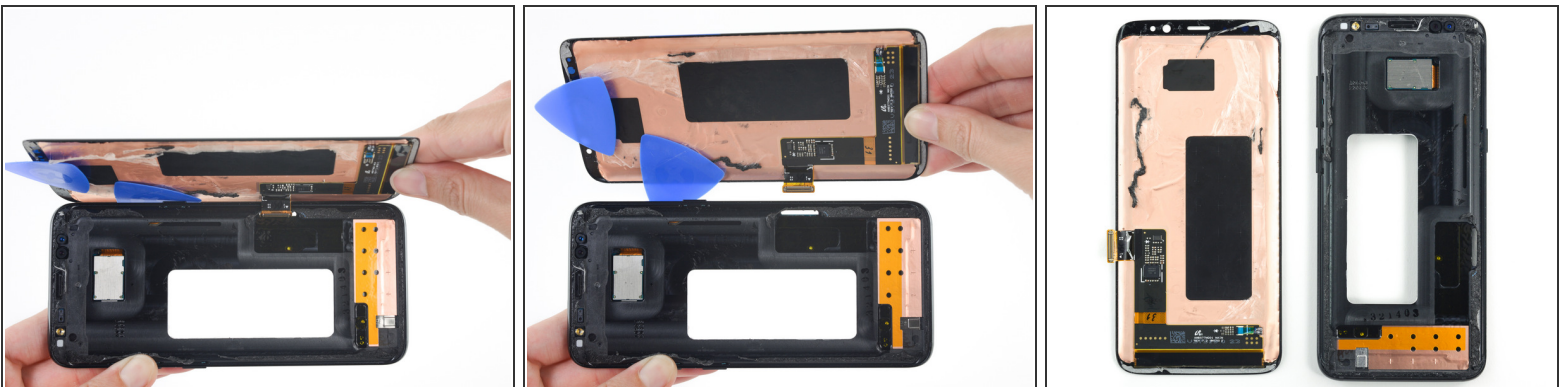

- Carefully lift the screen assembly away from the midframe, gently pulling the display connector through the hole in the midframe.
- Remove the screen assembly.

Step 23

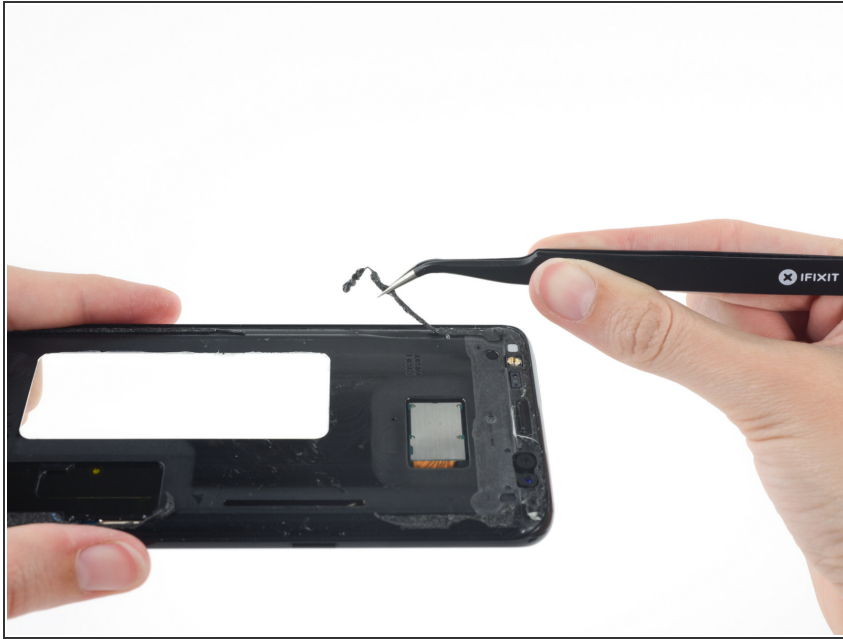

- Use a pair of tweezers to remove any adhesive left over on the phone body.

After reapplying adhesive, follow these instructions in reverse order to reassemble your device.

This document was last generated on 2017-12-04 06:19:13 PM.